


SHAD

YAMAHA MT09 TRACER '15 KIT TOP YOMT95ST

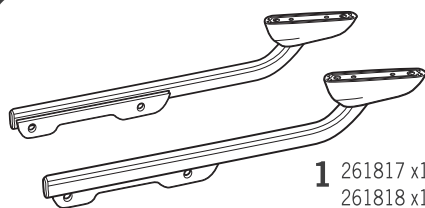

1 261817 x1 →
261818 x1 ←



2 261121 x4
Ø20 Ø11 x 18



3 303045 x8
Ø8



4 304039 x4
M8 x 40 Din 7380



5 304081 x4
M8 x 20 Din 7380



6 303018 x4
Ø8

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

